

# PNJ6-12S Non-isolated SIP Series

## Features

- Point of load(POL) applications
- High efficiency: 5V@94%
- -40 to +85 ambient operating temperature
- Open frame SIP
- Low output ripple and noise
- Positive enable function
- Adjustable output from 0.75V to 5.5V
- No minimum load requirement
- Fixed frequency switching(300KHZ)

## Environmental

- Operating board temperature range:  
-40°C to 100°C
- Storage temperature:  
-55°C to 125°C
- Temp.coefficient:  
<math>\pm 0.02\%/^{\circ}\text{C}</math>
- MTBF:  
>2 million hrs

## Electrical Specifications

### Input

Input range:	10-14Vdc
Input under-voltage shundown:	9.0-9.3Vdc

### Output

Voltage setpoint accuracy:	$\pm 2.0\%V_o$ max.
Voltage adjust:	0.75V to 5.5V
Line regulation:	$0.5\%V_o$ max.
Load regulation:	$1.0\%V_o$ max.
Over-current protection:	>200% $I_o$ , auto-recovery
Short-circuit protection:	continuous, auto-recovery
Ripple and noise:	<math>75\text{mVpp}</math> max.
Transient response:	recovery <math>150\mu\text{S}</math> max. 150mV max. (25% step load change from 50% $I_o$ ) di/dt: 1A/10uS

### Control


Control voltage:	
Positive logic	
High =on	3 to 14Vdc
Low=off	-0.2 to 0.8Vdc
Negative logic	
Low =on	-0.2 to 0.8Vdc
High=off	3 to 14Vdc
Control current:	2mA max



## Ordering Information

Input Voltage	Output Voltage	Output Current	Efficiency	Model Number
10V to 14V	0.75V	6A	79%	PNJ6-12SV75
10V to 14V	1.2V	6A	84%	PNJ6-12S1V2
10V to 14V	1.5V	6A	86%	PNJ6-12S1V5
10V to 14V	1.8V	6A	88%	PNJ6-12S1V8
10V to 14V	2.5V	6A	90%	PNJ6-12S2V5
10V to 14V	3.3V	6A	92%	PNJ6-12S3V3
10V to 14V	5V	6A	94%	PNJ6-12S05

## Dimensions

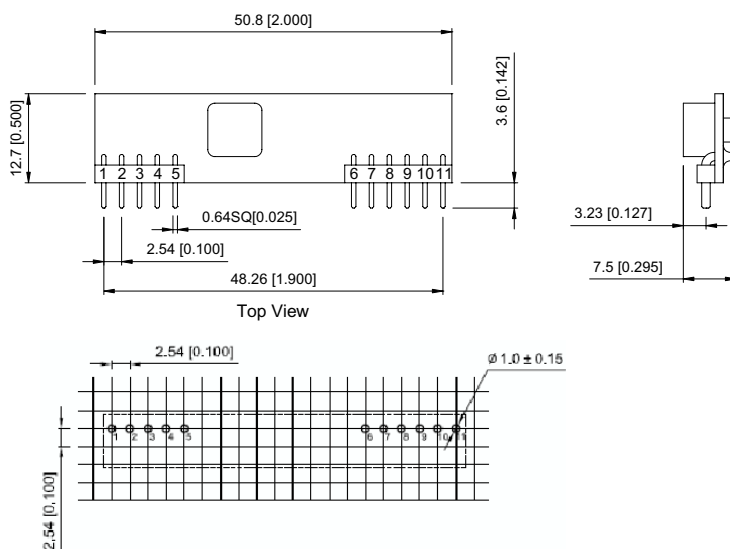

## Pin Assignments

1, 2, 4	Vo
3	SENSE
5, 6	GND
7, 8	Vin
9	NC
10	TRIM
11	CNT

TOLERANCES: X.Xmm=+/-0.5mm  
X.XXmm=+/-0.25mm

Unit:mm[inch]

Notes: The detail and recommended hole pattern layout is available in the Application Manual.

## Output Voltage Programming

The output voltage of the PNJ6 can be programmed to any voltage between 0.75Vdc and 5Vdc by connecting one resistor (shown as Rtrim in Figure 1) between the TRIM and GND pins of the module. Without this external resistor, the output voltage of the module is 0.7525 Vdc. To calculate the value of the resistor Rtrim for a particular output voltage Vo, please use the following equation:

$$R_{trim} = \left[ \frac{10500}{V_o - 0.7525} - 1000 \right] \Omega$$

For example, to program the output voltage of the PNJ6 module to 3.3Vdc, Rtrim is calculated as follows:


$$R_{trim} = \left[ \frac{10500}{3.3 - 0.7525} - 1000 \right] \Omega$$

PNJ6 can also be programmed by apply a voltage between the TRIM and GND pins (Figure 2). The following equation can be used to determine the value of Vtrim needed for a desired output voltage Vo:


$$V_{trim} := 0.7 - [(V_o - 0.7525) \cdot 0.0667]$$

For example, to program the output voltage of a PNJ6 module to 3.3 Vdc, Vtrim is calculated as follows

$$V_{trim} := 0.7 - (2.5475 \cdot 0.0667) = 0.53V$$

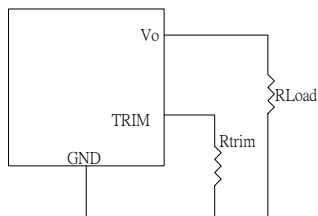

**Figure 1:** Circuit configuration for programming output voltage using an external resistor

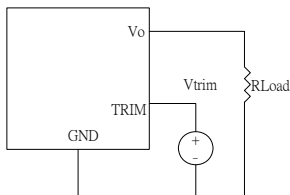

**Figure 2:** Circuit Configuration for programming output voltage using external voltage source

Table 1 provides Rtrim values required for some common output voltages, while Table 2 provides value of external voltage source, Vtrim, for the same common output voltages. By using a 1% tolerance trim resistor, set point tolerance of  $\pm 2\%$  can be achieved as specified in the electrical specification.

**Table 1**

VO (V)	Rtrim (K $\Omega$ )
0.7525	Open
1.2	22.464
1.5	13.047
1.8	9.024
2.5	5.009
3.3	3.122
5.0	1.472

**Table 2**

VO (V)	Vtrim (V)
0.7525	Open
1.2	0.670
1.5	0.650
1.8	0.630
2.5	0.583
3.3	0.530
5.0	0.4167